

DIGITAL LOCK USER INSTRUCTIONS

Electronic Lock User Instructions:

1. **Install Battery:**

As shown in picture 1 & 2 below

2. **FACTORY code:**

1,2,3,4,5,6 #

3. **Opening the door using the digital pad:**

Enter 1,2,3,4,5,6 # if the green Led lights up you will hear 2 beeps, Door can be opened (ROTATE CLOCKWISE) . If wrong code is entered more than 4 times the key pad will lock for 1 minute.

4. **To change the FACTORY code:**



Enter 1,2,3,4,5,6 #, green LED will light up ; press * key and the yellow LED will light up; Within 8 seconds enter a new 4-8 digit code and press * to confirm; Within 8 seconds enter the new 4-8 digit code again and press * to confirm; When you hear 3 beeps this means you have been successful. If you hear 4 beeps this means you have been unsuccessful, please try again.

5. **Low battery**

Both red and green LED light up, means low battery, please replace the battery ASAP



TWIST OFF DIGITAL KEY PAD

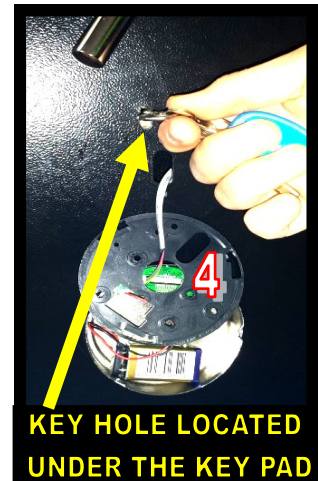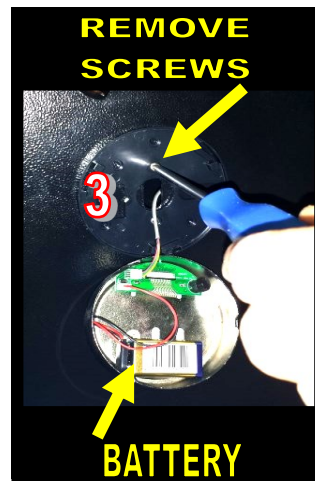

USING THE OVERRIDE KEY & REPLACING THE BATTERY:

To remove the "twist" digital pad follow the pictures above

- Place hand on pad and press the clip located at the base, 1/4 turn left. NO:1
- Remove the 2 screws holding the plastic keeper. Key hole can be seen, rotate key "clockwise" (right) to retract locking bolt. NO:3
- Rotate the handle "ANTI-CLOCKWISE" (left) to open the door when using the override key.
- To replace battery, twist off key pad and you will see the battery
- Repeat in reverse to set back to normal operation

